

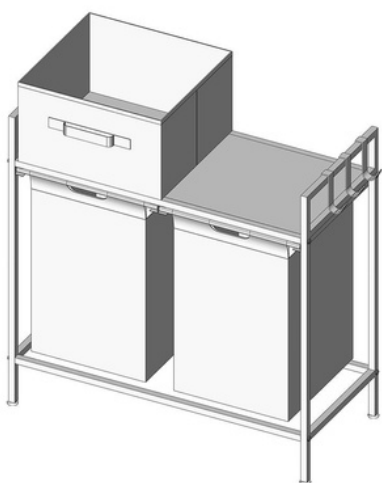








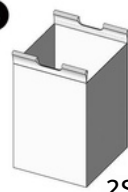

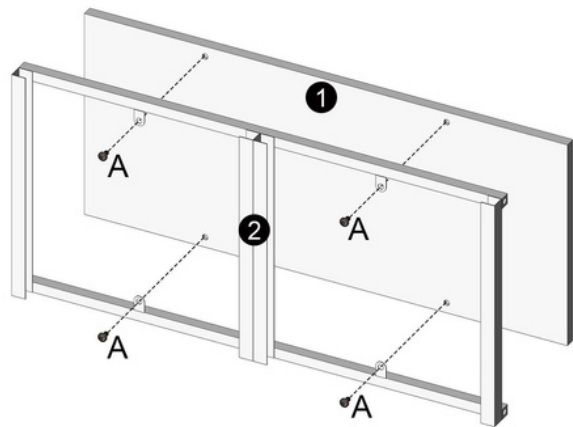
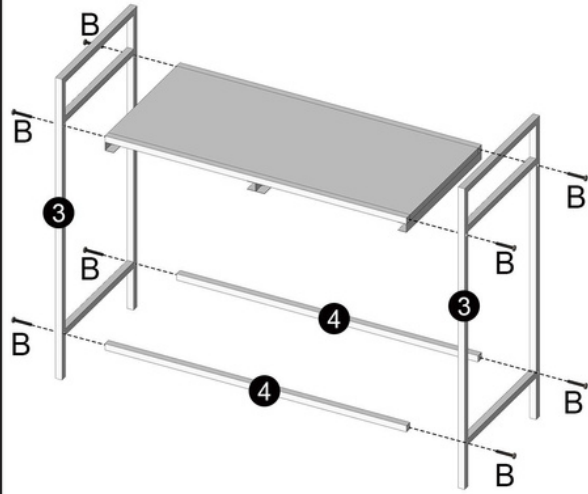


Montageanleitung

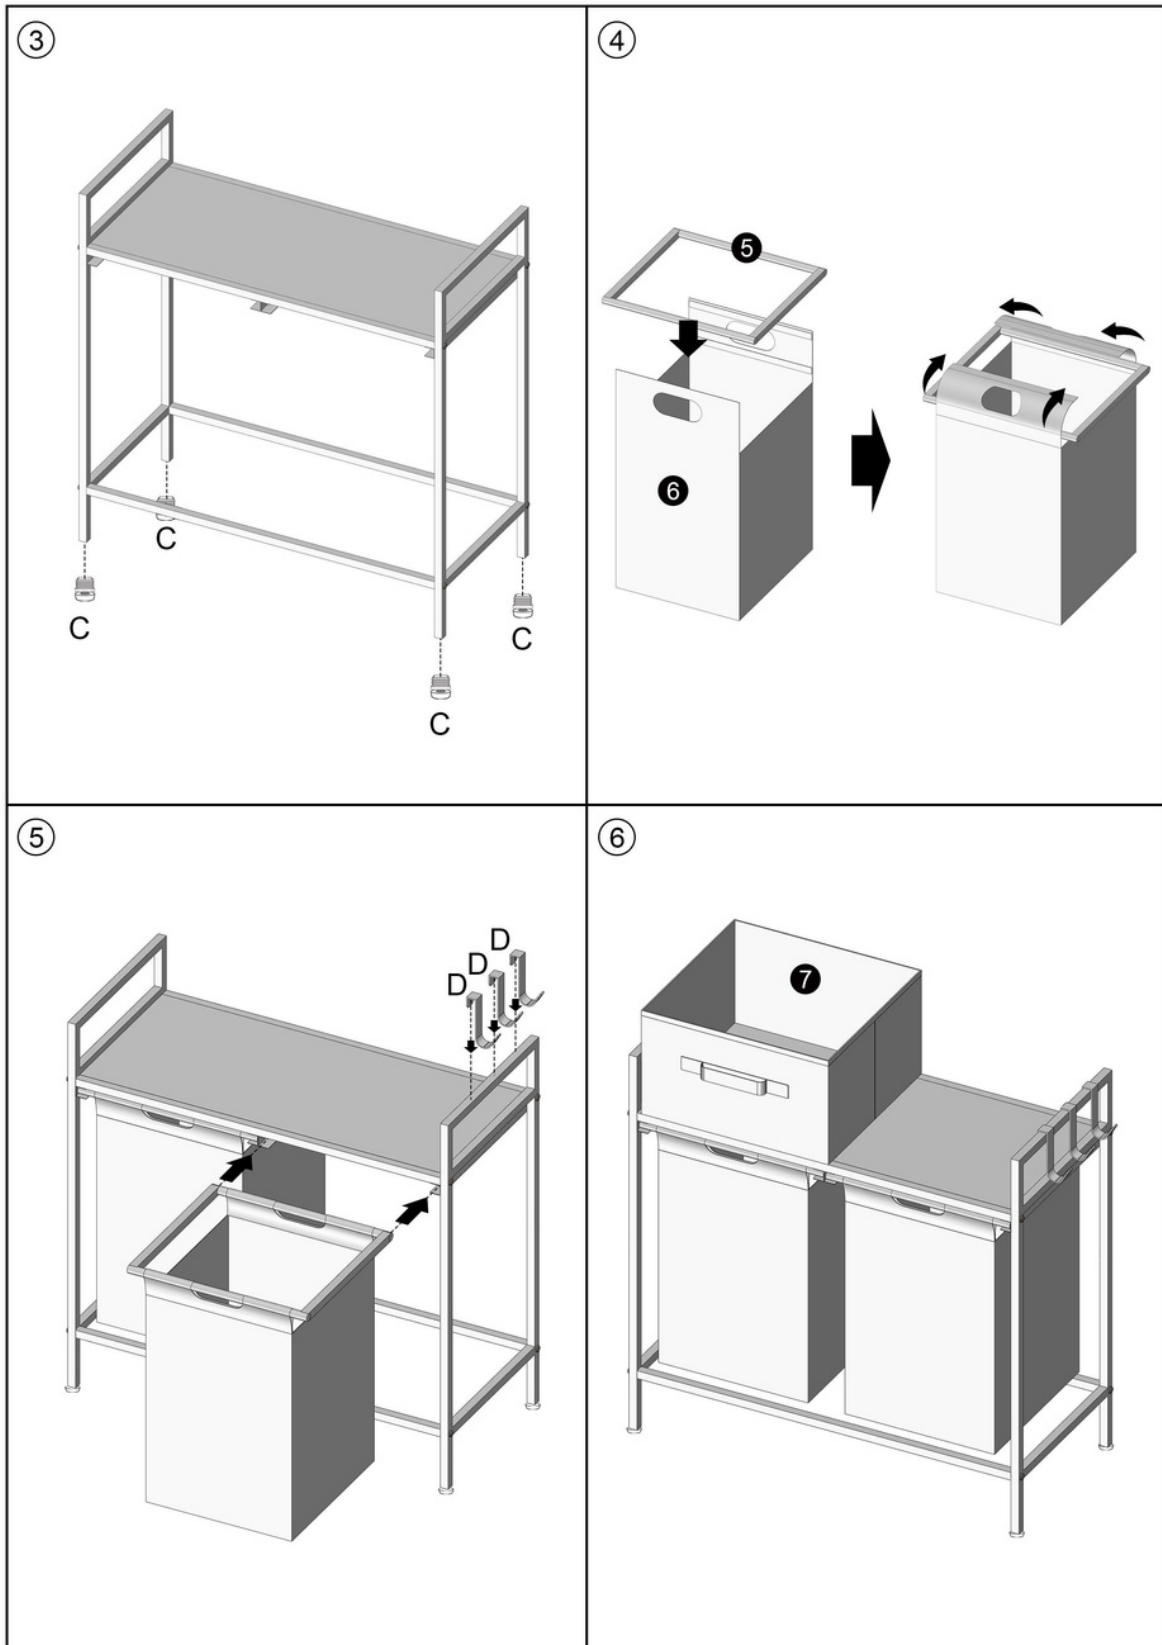
Wäschekorb Eiche naturgeölt H4H314

Zubehörliste					
A  M6x10mm 4Stk	B  M6x35mm 8Stk				
C  4Stk	D  3Stk			E  1Stk	
1  1Stk	2  1Stk			3  2Stk	
4  2Stk	5  2Stk			6  2Stk	7  1Stk

Aufbau	
1 	2 











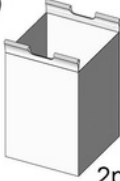

Montageanleitung

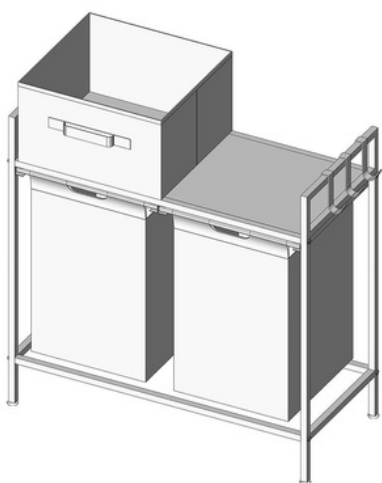
Wäschekorb Eiche naturgeölt H4H314

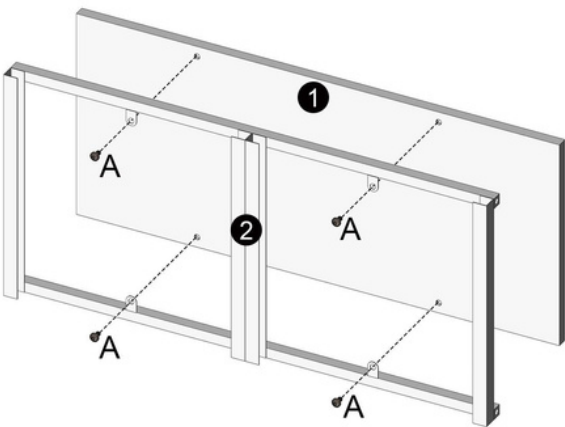
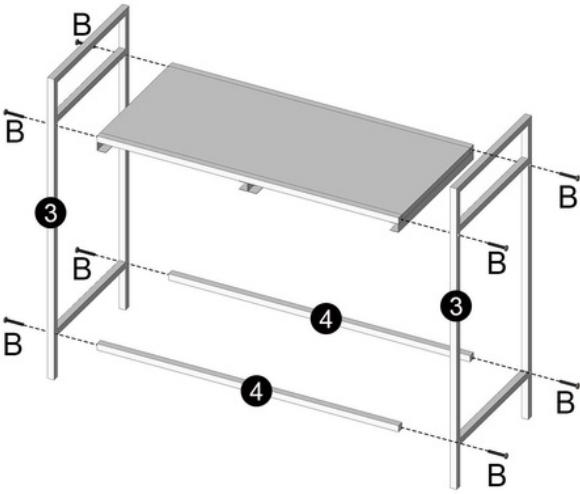


Assembly Instruction

Laundry Basket Oak natural Oil H4H314

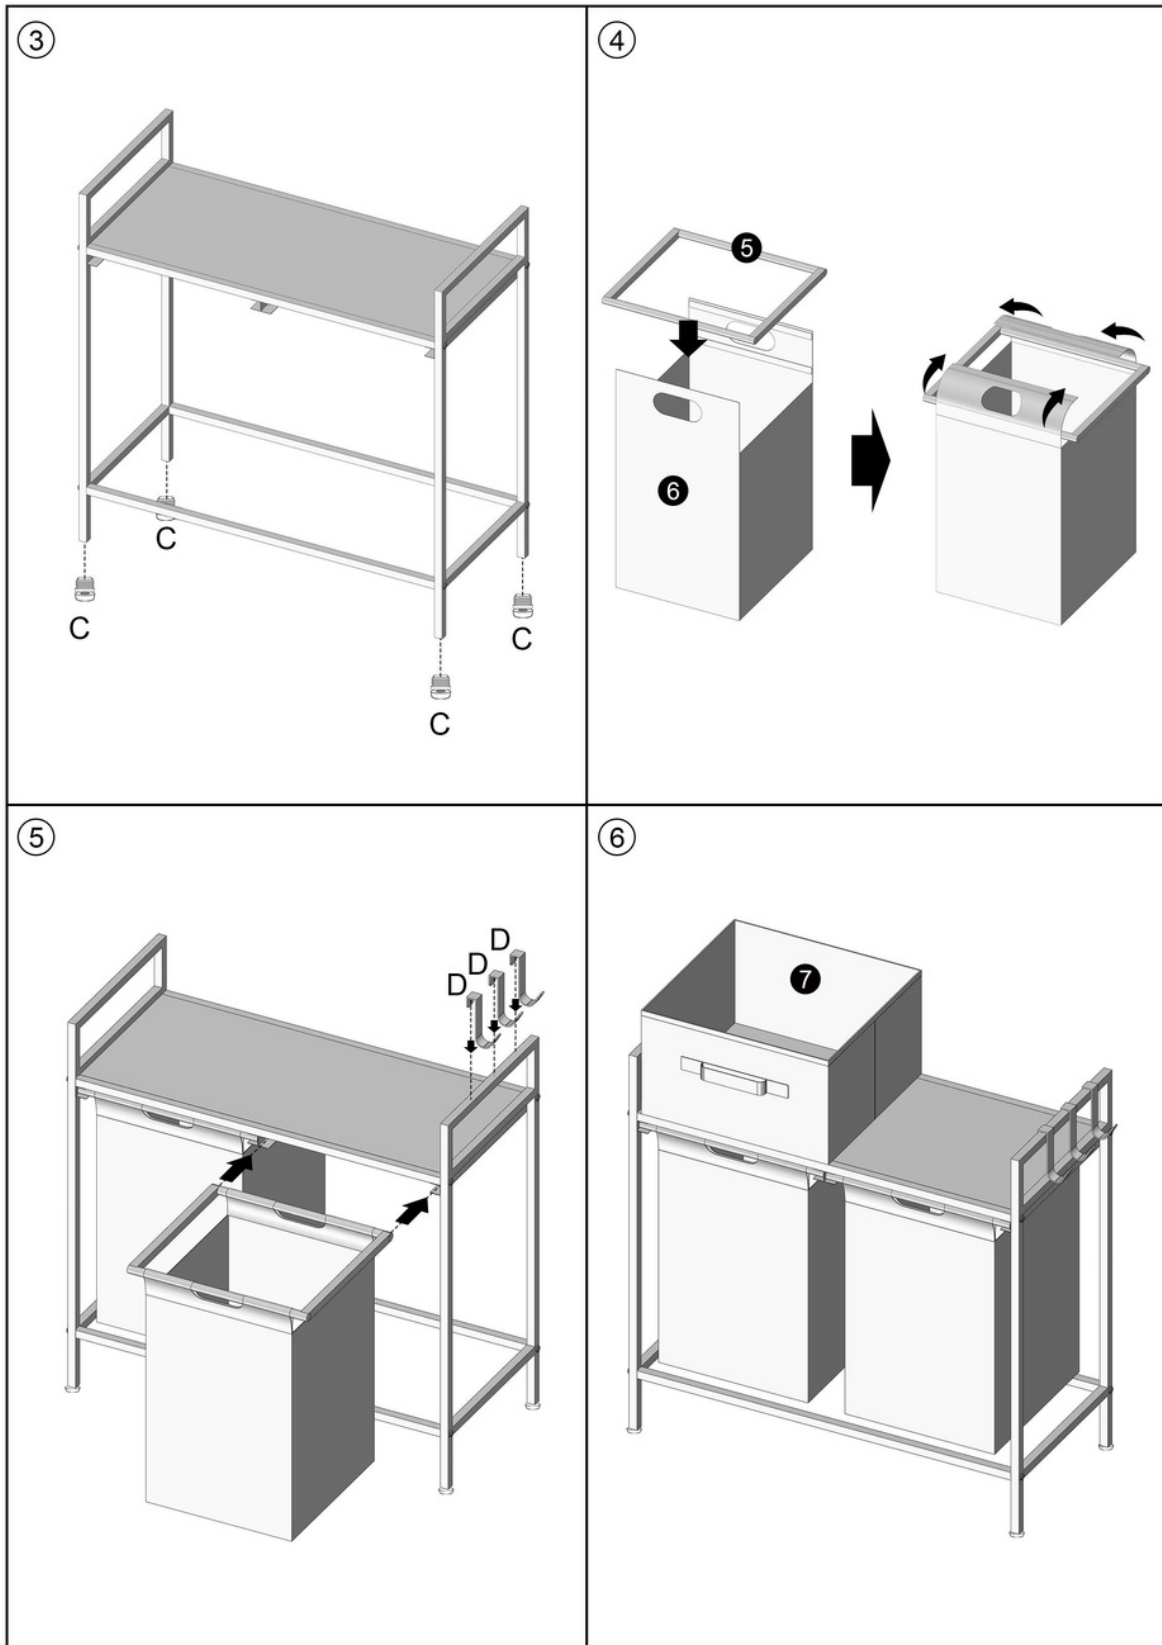
Accessories list			
A  M6×10mm 4pcs	B  M6×35mm 8pcs		
C  4pcs	D  3pcs	E  1pcs	
1  1pcs	2  1pcs	3  2pcs	
4  2pcs	5  2pcs	6  2pcs	7  1pcs



Installation process	
<p>1</p> 	<p>2</p> 



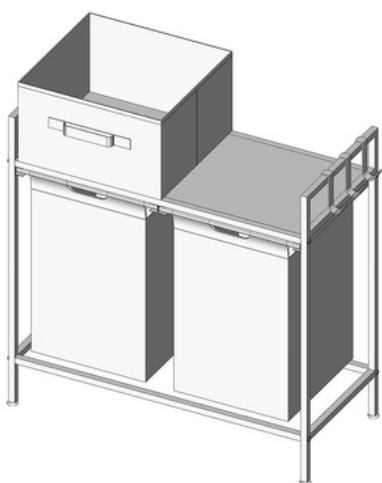








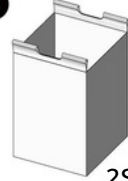

Assembly Instruction

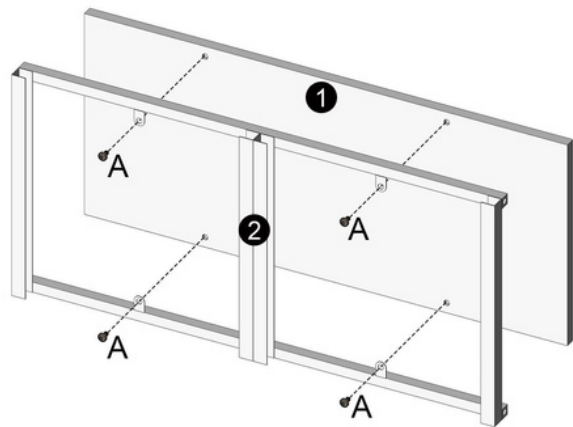
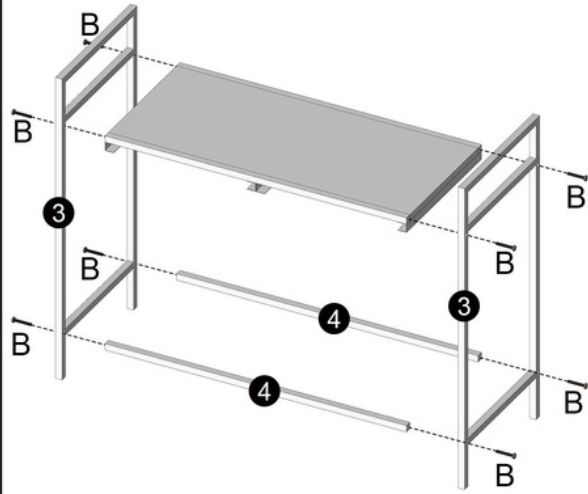
Laundry Basket Oak natural Oil H4H314



Montageanleitung

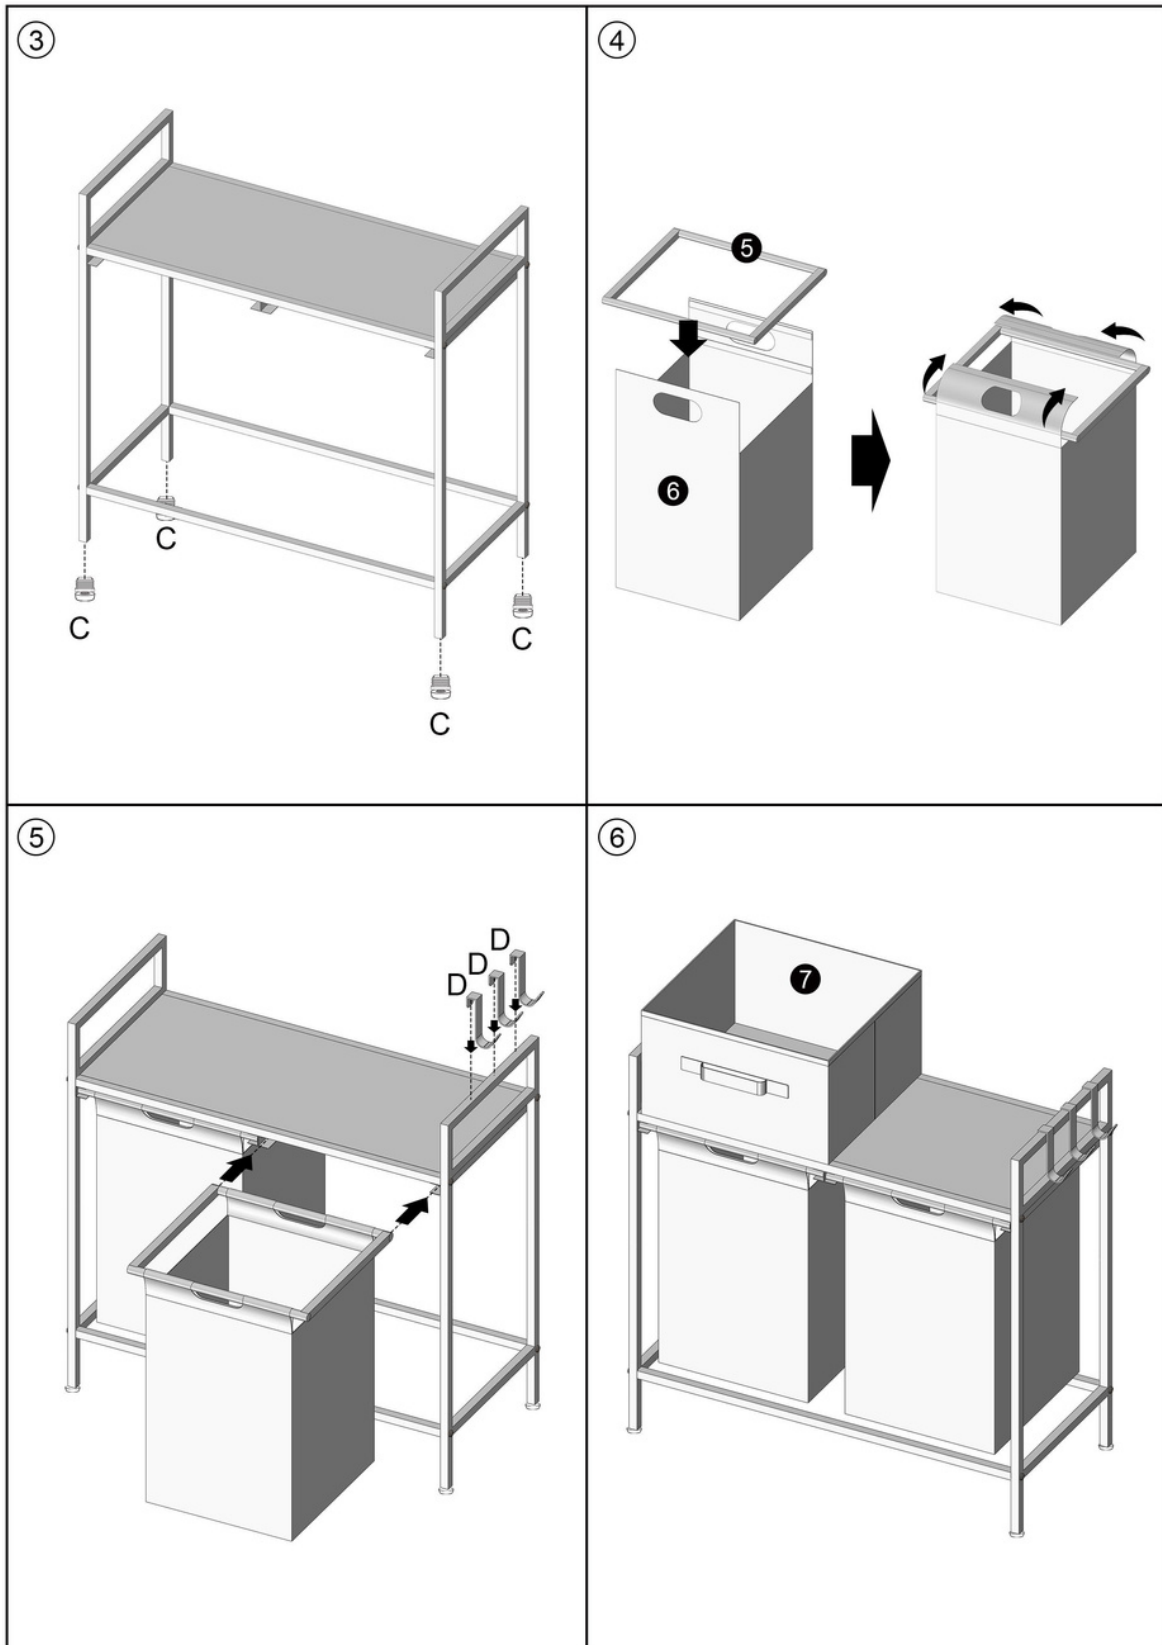
Wäschekorb MDF Sonoma Eiche H4H315

Zubehörliste					
A  M6×10mm 4Stk	B  M6×35mm 8Stk				
C  4Stk	D  3Stk			E  1Stk	
1  1Stk	2  1Stk			3  2Stk	
4  2Stk	5  2Stk			6  2Stk	7  1Stk

Aufbau	
1 	2 



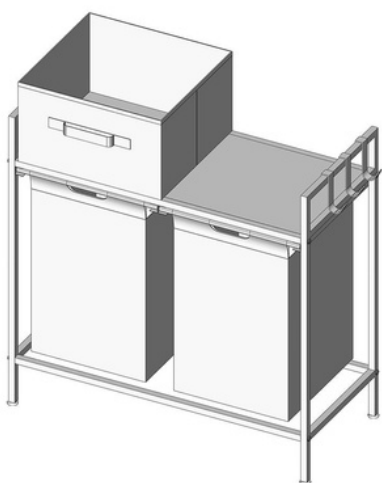










Montageanleitung

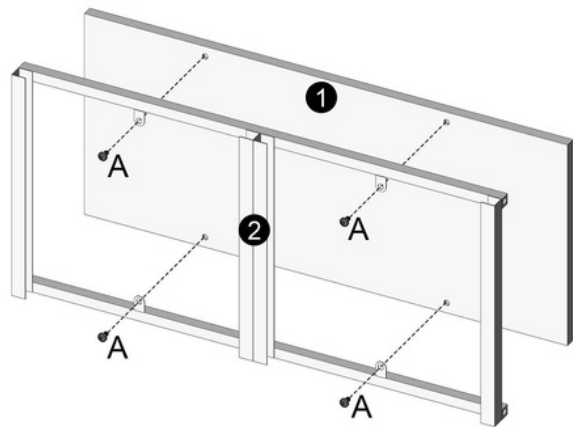
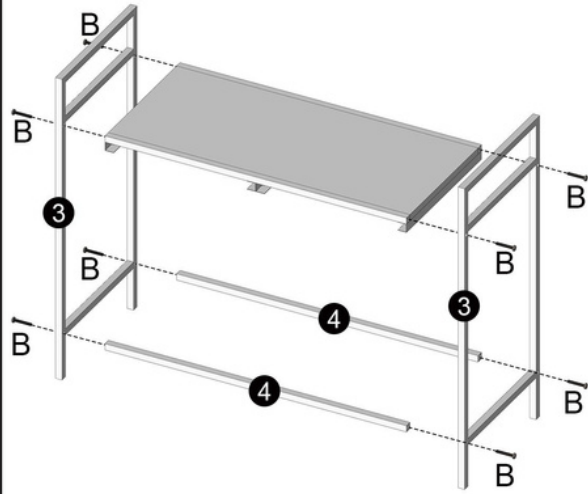
Wäschekorb MDF Sonoma Eiche H4H315



Assembly Instruction

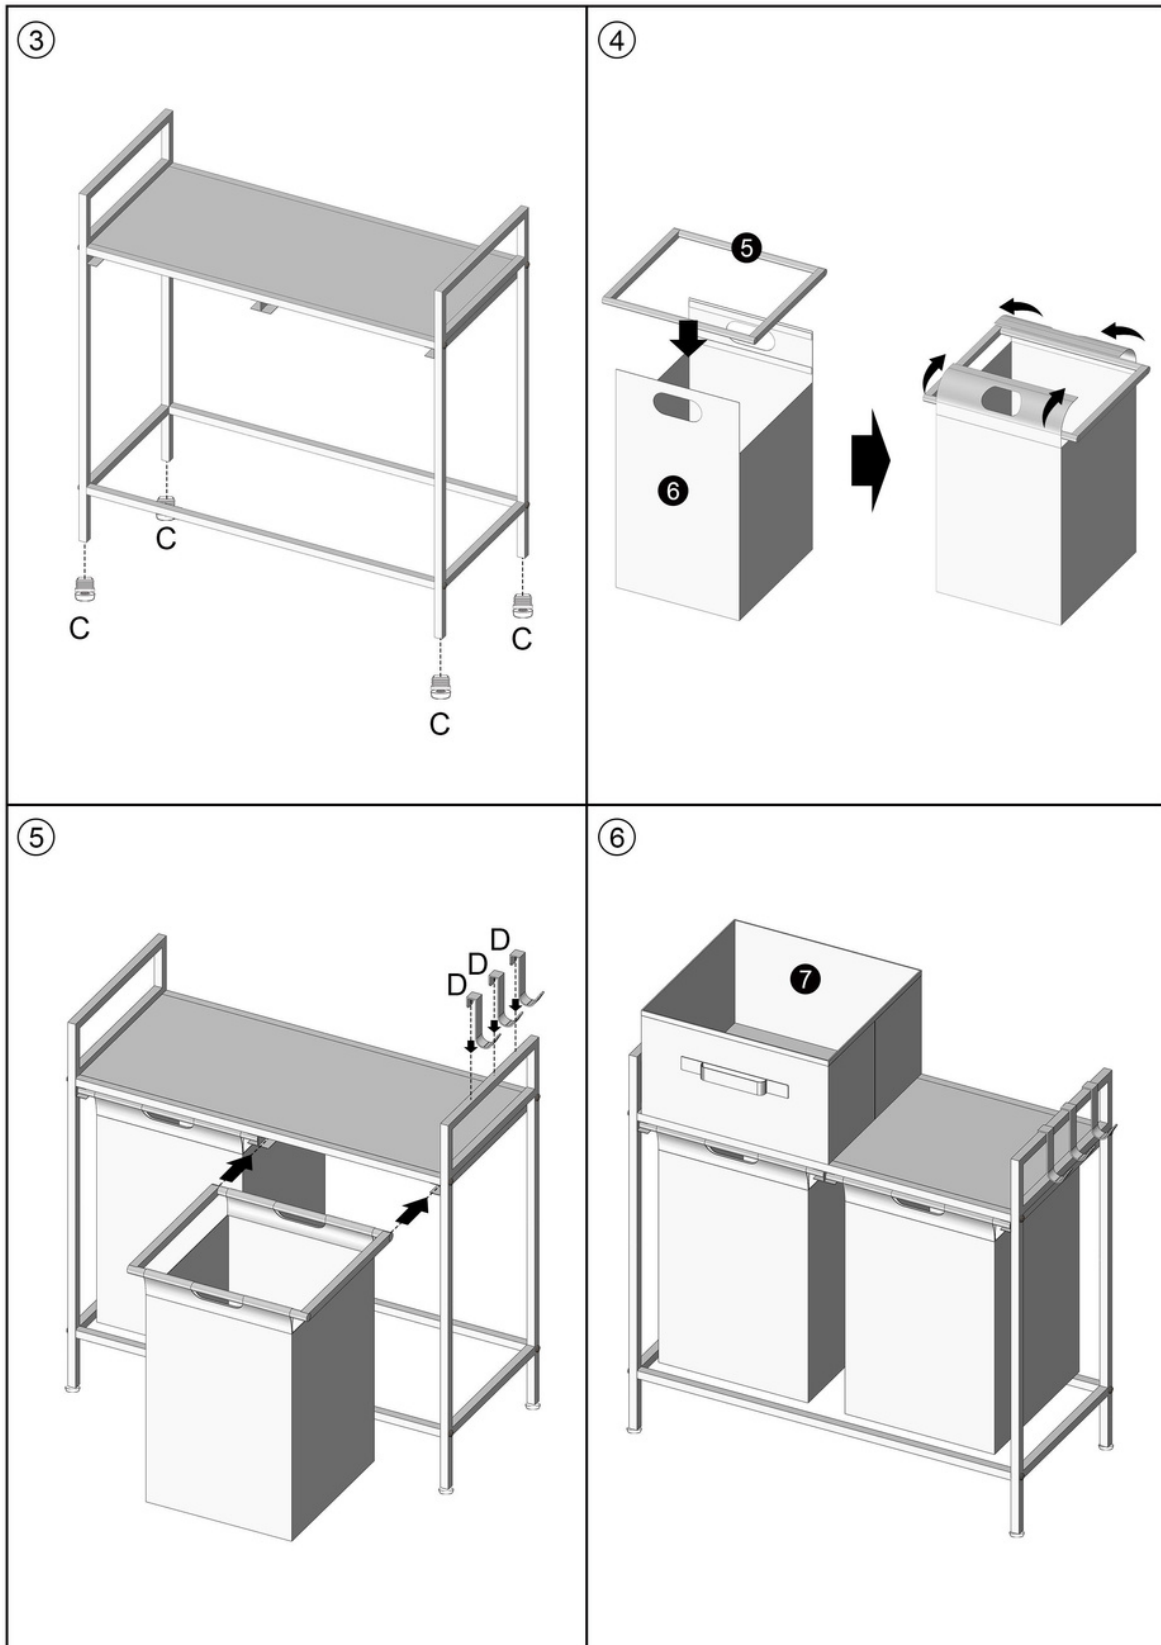
Laundry Basket MDF Sonoma Oak H4H315

Accessories list					
A  M6×10mm 4pcs	B  M6×35mm 8pcs				
C  4pcs	D  3pcs			E  1pcs	
1  1pcs	2  1pcs			3  2pcs	
4  2pcs	5  2pcs			6  2pcs	7  1pcs

Installation process	
<p>1</p> 	<p>2</p> 



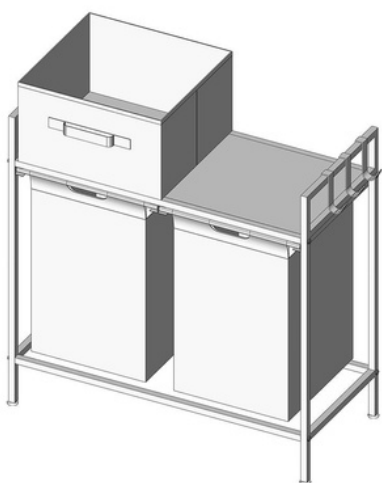








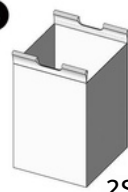

Assembly Instruction

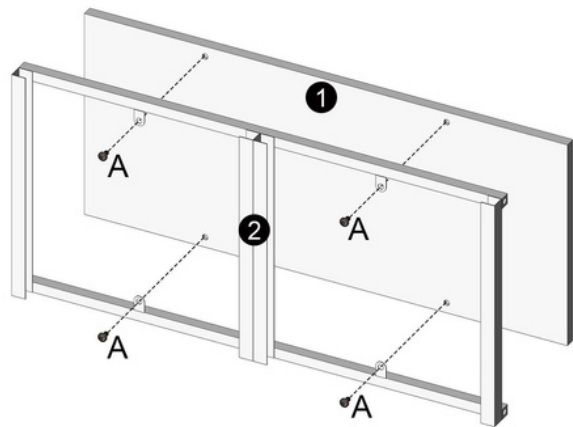
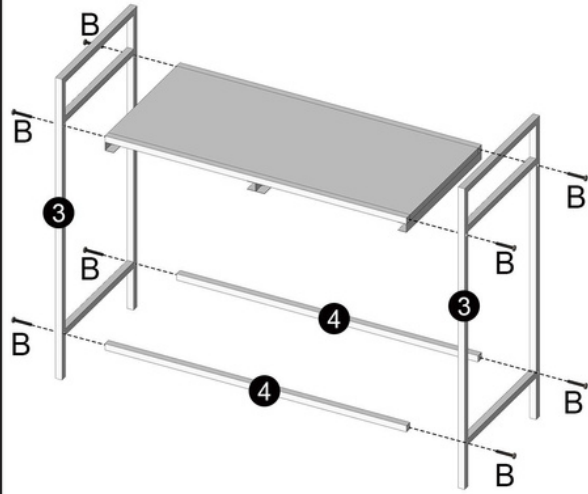
Laundry Basket MDF Sonoma Oak H4H315



Montageanleitung

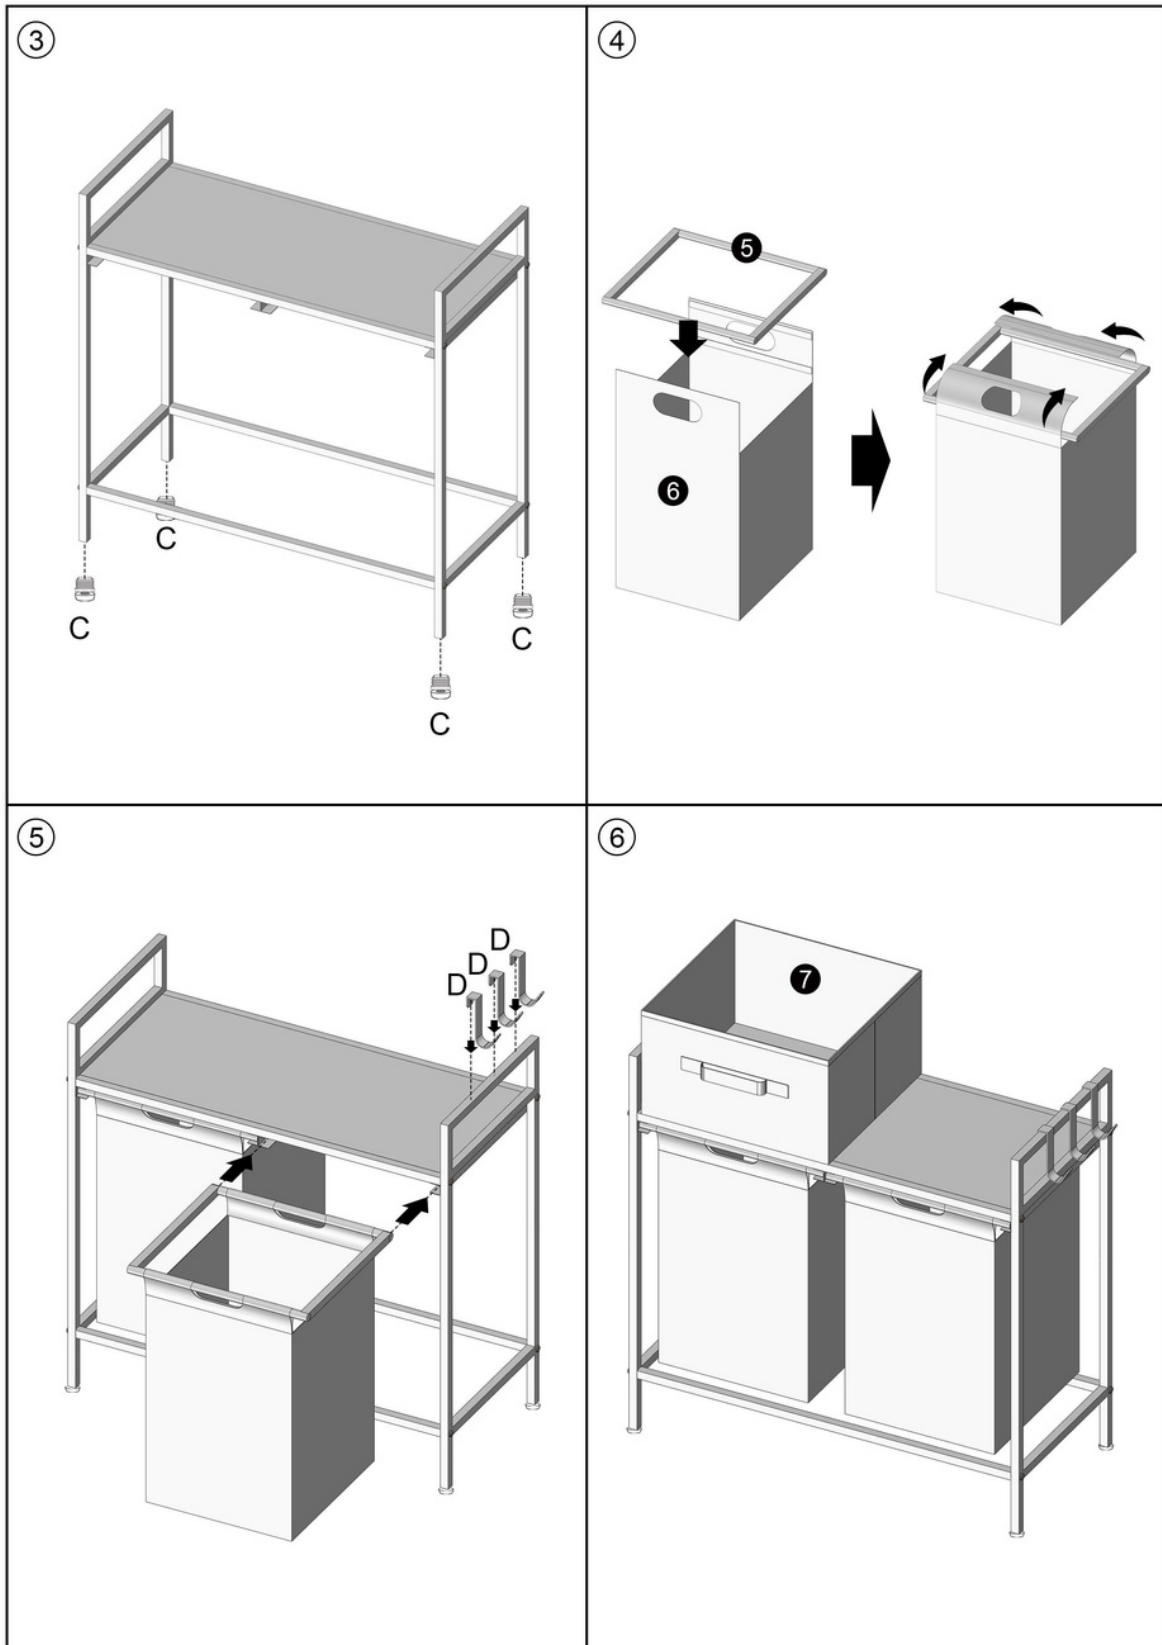
Wäschekorb MDF H4H311

Zubehörliste			
A  M6x10mm 4Stk	B  M6x35mm 8Stk		
C  4Stk	D  3Stk	E  1Stk	
1  1Stk	2  1Stk	3  2Stk	
4  2Stk	5  2Stk	6  2Stk	7  1Stk

Aufbau	
1 	2 



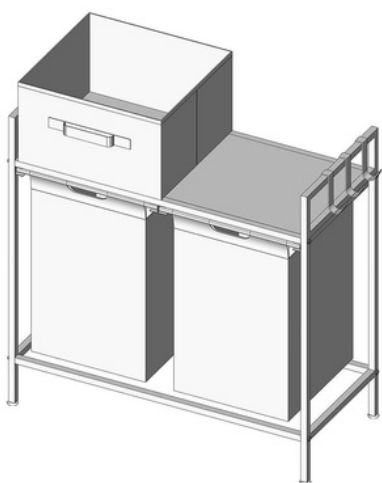








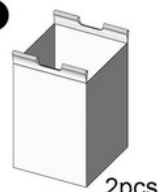

Montageanleitung

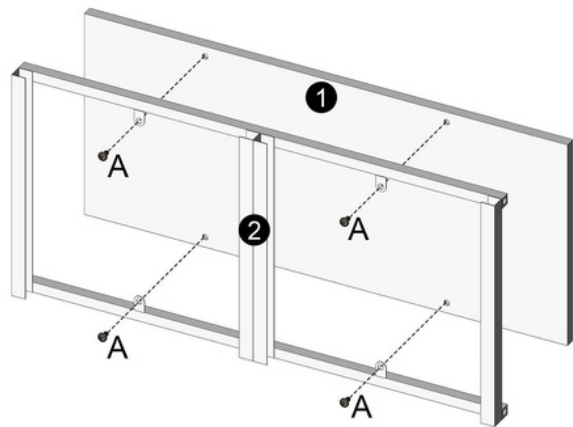
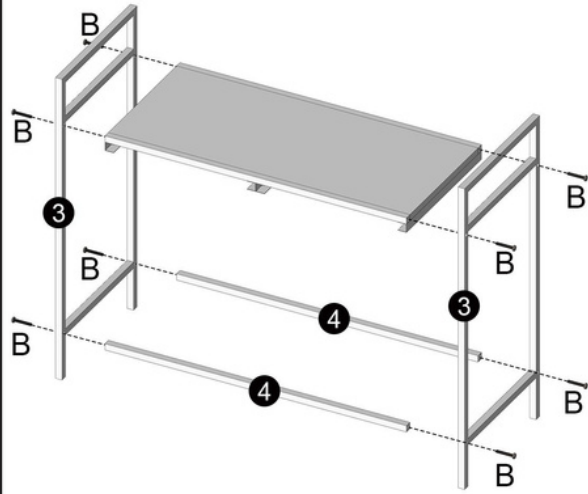
Wäschekorb MDF H4H311



Assembly Instruction

Laundry Basket MDF H4H311

Accessories list			
A  M6×10mm 4pcs	B  M6×35mm 8pcs		
C  4pcs	D  3pcs	E  1pcs	
1  1pcs	2  1pcs	3  2pcs	
4  2pcs	5  2pcs	6  2pcs	7  1pcs

Installation process	
<p>1</p> 	<p>2</p> 

Assembly Instruction

Laundry Basket MDF H4H311

